



Torque defines the real limit in machining

28 April 2026, 11:24

Samuel Milton

Why torque quietly defines machining stability at speed

Spindle power gets all the attention. But it's torque that quietly decides whether your process holds together at speed.

Walk into any machine shop and ask what defines a spindle's capability. Most answers will land on power: kilowatts, horsepower, rated output. It's a reasonable instinct. But it misses something fundamental and that blind spot is exactly where processes go wrong.

Power defines what a spindle can do. Torque determines what it can do reliably.


The physics underneath

Torque, speed and power are bound by a single relationship:

$$P = T \cdot n \cdot 0.001$$

- **P** = power (kW)
- **T** = torque (Nm)
- **n** = spindle speed (RPM)

This equation reveals a tension that shapes every cutting decision. A spindle operates across two distinct regions. Below the base speed, torque stays constant and power climbs with RPM. Above

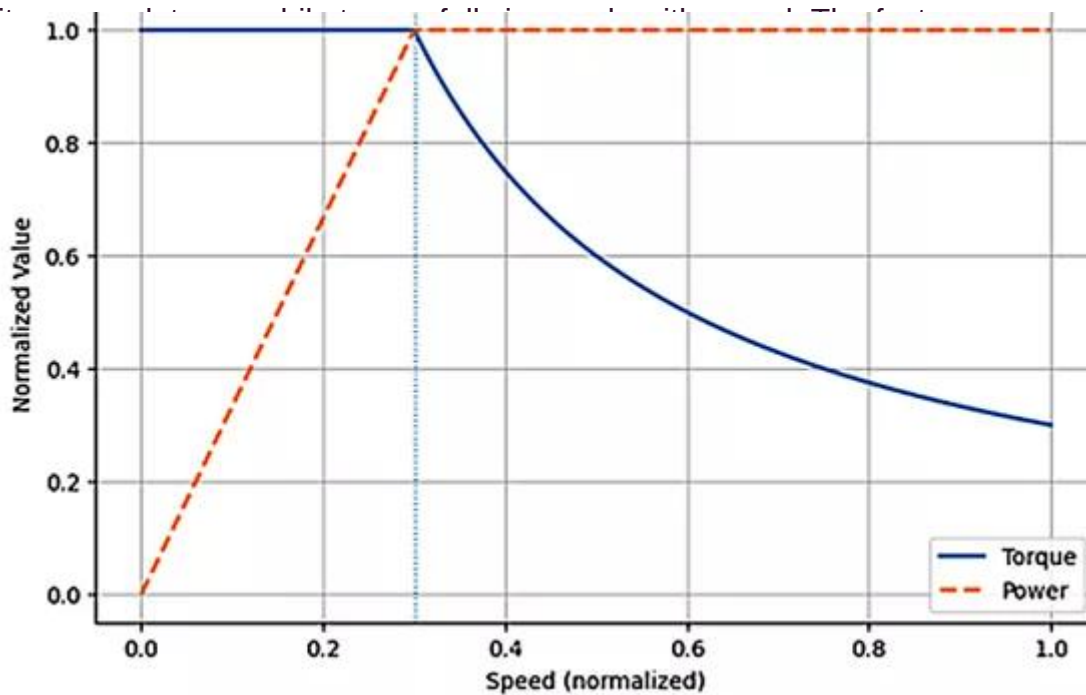

the less rotational
below.

Why cutting torque doesn't care about your RPM

The torque a cut demands depends on cutting force and tool diameter, not spindle speed. Depth of cut, chip load and material hardness set a floor that the spindle must meet. Increase RPM without changing the cut and the demand stays fixed while available torque shrinks.

Where material behaviour changes everything

Not all materials present the same challenge. The distinction isn't just hardness, it's how consistently the material cuts.

ALUMINUM

Smooth chip formation

Low, stable cutting forces

STAINLESS STEEL

Work hardening in cut

Variable, unpredictable forces

MILD STEEL

Consistent engagement

Moderate torque demand

TITANIUM / SUPERALLOYS

Strong force fluctuations

High chatter tendency

At low spindle speeds, high available torque absorbs these fluctuations. Stainless steel's work-hardening surges, titanium's force spikes, the spindle has margin to handle them.

The same parameters. Two materials. One stable, one not. Torque margin is the difference.

The assumption that leads machinists astray

The common mistake is straightforward: if required power falls below the spindle's rated power, the process must be safe. This logic is incomplete.

What this means in practice

Understanding the torque-power relationship reframes how you approach process planning. Speed isn't free, it costs torque. And the harder the material, the less forgiveness you have when that budget runs thin. Checking power alone before a high-speed cut in a difficult material isn't a safety check. It's a partial check.

Safer planning means accounting for both axes: available torque at the intended RPM and the force variability of the specific material being cut. These two factors together determine not just whether a process is possible, but whether it's stable.

Machining is ultimately a negotiation between what the spindle can deliver and what the material demands, stroke by stroke, tooth by tooth. Power sets the envelope. Torque governs everything inside it.

Explore how DigiMach can support your machining process

Curious how digital tools can strengthen your machining operations? DigiMach helps you test, validate and implement practical solutions.

[Discover the project](#)

Want to assess your torque limits in machining?

Our expert helps you translate these insights into your specific setup.

[Contact us](#)

Authors



Samuel Milton